

PTZ Mounting Solutions

The Sachtler and Vinten PTZ accessory plates are designed for simple mounting of a PTZ camera to the widest range of tripods and pedestals.

Simply select the correct plate and interface for your chosen camera support.



V4166-1002 PTZ or Prompter Plate
Use to mount:

1. Any PTZ camera where the tapped mounting holes on the underside are in line with the lens centre of the camera.
2. To fit to the bottom of a prompter bracket when the PTZ is mounted to a prompter.



V4166-1001 Universal PTZ Plate
Use to Mount:

1. This plate has a series of different mounting patterns for PTZ's of different brands that do not have the lower mounting holes centrally aligned.

Interface:

Both plates can be fitted with OConnor standard ball bases and tiedowns (75mm, 100mm, 150mm), all flat pedestal base types and Mitchell mount as outlined overleaf.

Support:

- Works with any Sachtler Vinten or OConnor Tripod or pedestal.

Speak to your local partner about Sachtler or Vinten complete packages which include everything you need to successfully mount and position your PTZ.



V4166-1001 Universal Plate is compatible with:

- + Panasonic AW-HE40, AW-UE70
- + Panasonic AW-HE130, AW-UE1500W/K
- + Panasonic AW-HR140
- + Sony BRC-H800, BRC-H900, BRC-X1000
- + Sony SRG-120DS, SRG-120DU
- + Sony BRC-X400, BRC-X401, SRG-201M2, SRG-360SHE, SRG-HD1M2, SRG-X120M, SRG-X400
- + Sony SRG-300H, SRG-300SE
- + Generic Tripod Mount

Choose Your Plates



Choose Your Interface

Base					
	V4166-1010	08365	08414	08281	08349
Tiedown					Not required
	S2150-1300	S2052-1100	C1234-1017	C1234-1018	
Description	To attach to <i>any</i> 75 mm tripod or hi-hat	To attach to <i>any</i> 100mm tripod or hi-hat	To attach to <i>any</i> 150mm tripod or hi-hat	To attach to <i>any</i> Mitchell mount tripod, hi-hat or dolly	To attach to <i>any</i> flat base Sachtler or Vinten tripod or pedestal (4 bolt / 3 bolt / quickfix]

Choose Your Support

Any Vinten, Sachtler or OConnor camera support

